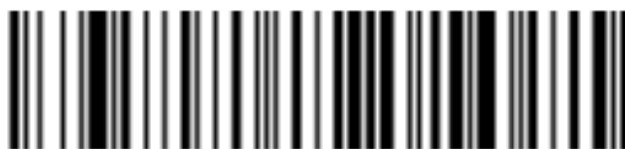# Honeywell 1200g Enter Suffix

Scan all barcodes from top to bottom

DEFALT.

Activate Custom Defaults

SUFCA2.

Clear All Suffixes

VSUFCR.

Add CR Suffix
All Symbologies

Part of the Xcelerate retail platform   xcelerate